

TriFlash Shoe Lock

The TriFlash Shoe Lock is a unique bracket which allows photographers to attach up to three flashguns onto one light stand. The bracket features an umbrella socket so the gun(s) can be used with or without a shoot through or reflective umbrella. The adjustable 'screw locking' shoe mounts offer an additional locking mechanism to work alongside the built in method used on a flashgun. Whether you are looking for increased overall power or a quicker recycling time with the guns on a lower power, the TriFlash Shoe Lock will be a valuable addition to your kit.



Features

- ▶ Attach up to three flash guns
- ▶ Screw locking
- ▶ Can be mounted onto a standard brass spigot
- ▶ Umbrella socket

Specifications

Triflash Shoe Lock	Code
Triflash Shoe Lock	LL LA2423



TriFlash Sync

The TriFlash Sync is identical to the TriFlash Shoe Lock but with the added benefit of a built in sync system allowing the photographer to fire up to three flash guns from one triggering device.

The sync bracket can be fired by either the built in slave cell or via a triggering device plugged into the built in X sync/PC sync socket. The built in slave cell can be adjusted to allow for none, 1, 2 or 3 pre flashes if required.

The TriFlash Sync is shipped with a 3.5mm to 3.5mm mono jack cable and a 3.5mm mono jack to PC Sync cable to attach third party triggering systems. There is also a dummy cold shoe included for photographers who only work with one or two guns and want to slide their trigger receiver (i.e. Pocket Wizard) onto one of the spare shoe mounts.

Features

- ▶ Attach up to three flash guns
- ▶ Built in slave cell with pre-flash recognition
- ▶ X sync/PC sync socket for third party triggering devices

Specifications

TriFlash Sync	Code
TriFlash Sync	LL LA2455



TriFlash using built in slave cell



TriFlash with Pocket Wizard