

Off Camera Cords

A range of extension cords to enable the photographer to position their battery operated flashguns up to 3m (9'9") away from the camera. Available in Canon, Nikon, Pentax, Olympus and Sony versions. A shorter 1m (3'3") cord is also available for Canon and Nikon only.



Single eTTL Canon Pro (1m) LL LSS9902



Single iTTL Nikon Pro (10m) LL LS9921

Features

- ▶ Single shoe mount
- ▶ Retains all TTL metering
- ▶ Position gun up to 3m from the camera
- ▶ Available to fit Canon, Nikon, Pentax, Olympus and Sony

Specifications

Off Camera Cords 3m		Code
Single eTTL Canon Pro (3m)		LL LS2424
Single iTTL Nikon Pro (3m)		LL LS2425
Single pTTL Pentax (3m)		LL LS2426
Single eTTL Olympus (3m)		LL LS2427
Single eTTL Sony (3m)*		LL LS2428
Off Camera Cords 1m		Code
Single iTTL Nikon Pro (1m)		LL LS9901
Single eTTL Canon Pro (1m)		LL LS9902
Off Camera Cords 10m		Code
Single eTTL Canon Pro (10m)		LL LS9922
Single iTTL Nikon Pro (10m)		LL LS9921

*iISO fitting

Sync Block

The Sync Block (non TTL) is ideal for photographers who want the benefits of using a radio trigger but do not have a sync connection socket on their flashgun. Simply attach the cast aluminium sync block to the bottom of the flashgun and then plug the sync cable attached to the block into the remote radio trigger receiver unit. The flashgun can now be fired via the remote transmitter fitted to the hotshoe on the top of the camera. The Lastolite sync block is compatible with any radio trigger featuring a PC sync/X sync socket.



Features

- ▶ Non TTL
- ▶ For flashguns without an X sync/PC sync socket

Specifications

Sync Block for remote triggers		Code
Sync Block for remote triggers		LL LA2419

